VIDEOCON V1402

User Manual

DIGITAL
CAMERA

Contents

1. Legal Information 1

2. Important Notice 2

3. Getting Started 4

3.1. Packing Contents 4

3.2. Installing SIM, Battery and Attaching other Accessories 4

SIM Card, Memory Card & Battery Installation 4

Connecting Hands-free Kit (Ref Figure 2) 6

Connecting the charger/Charging the Battery (Ref Figure 3) 7

3.3. Phone Keypad Layout (Figure 4) 8

Left Soft Key 9

Right Soft Key 9

Dial Key 9

End Key 9

Up and Down Direction Keys 9

Left and Right Direction Keys 9

0-9 Keys 9

* & # Key 10

3.4. Important Phone Icons 10

Signal Strength Icon 10
Battery Meter Icon 11
Keypad Lock Icon 11
3.5. Basic Functions 11
Make a Call 11
Making a Call Using Call logs 12
Answering a Call 12
Call Option 12
4. Menu Layout 14
4.1. Phonebook 15
Quick search 15
Search contacts 17
Add new contacts 17
Copy or delete 17
Caller groups 17
Extra number 18
Phonebook settings 18
My vCard 18
4.2. Call history 19
4.3. User profiles 19
4.4. Multimedia 20

Camera 20
Image viewer 21
Video recorder 22
Video player 22
Audio player 22
Sound recorder 23
FM Radio 24
Schedule FM recording 25
4.5. Messages 25
SMS 25
MMS 26
Schedule SMS 27
Chat 27
Voice mailbox 27
Broadcast message 27
4.6. Game 27
Copter 27
Game settings 27
4.7. Organizer 28
File manager 28
Calendar 28

Tasks 29
Alarm 29
Calculator 29
E-book reader 30
Stopwatch 30
World clock 30
Currency converter 30
4.8. Services 30
STK 30
WAP 30
Data account 32
4.9. Settings 32
Call settings 32
Dual SIM settings 34
Phone settings 34
Network settings 36
Security settings 36
Restore factory settings 38

1. Legal Information

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of VIDEOCON is prohibited.

VIDEOCON operates on a policy of continuous development. VIDEOCON reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall VIDEOCON be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as it is". Except as required by applicable law, no warranties of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. VIDEOCON reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with VIDEOCON Executive.

2. Important Notice

Important Safety Precautions

- Do not use the device while driving. In some countries, it is illegal to use such devices while driving.
- Switch off when refueling. Do not use the device at a refueling point (service station) or near fuels or chemicals.
- Switch off in aircraft. Mobile phones and GSM devices can cause interference. Using them on aircraft is both illegal and dangerous.

Follow Special Regulations

- **Special Regulation**. Follow any special regulations in force in any area and always switch off your device whenever it is forbidden to use it, or when it may cause interference to the surrounding.
- **Radio Interference**. All mobile phones cause radio interference within the specified Limits of GSM standards.
- **Qualified service**. Only qualified service personnel must repair the equipment. Use only approved accessories and batteries.
- **Emergency calls**. Ensure that the phone is switched on and in service. Enter the emergency number (112 or another official emergency number) and press the "Dial" key.

- **Use only approved accessories**. The use of any other power accessory will violate warranty conditions that apply to the phone.

Safe Operation Instructions

- Before Installing or operating this product, read this manual carefully.
- Do not expose unit to rain or moisture.
- Do not place unit on or close to any heat source.

3. Getting Started

3.1. Packing Contents

Before using VIDEOCON V1402 mobile phone, carefully remove the contents from the shipping carton and check for any damages or missing contents. Incase you find any, contact your Authorized Distributor or shipping agent immediately. The standard packing contents are as follows:

- Base Trans-receiver
- Battery
- Charger
- Hands free Kit
- User Manual
- Service Guide

3.2. Installing SIM, Battery and Attaching other Accessories

SIM Card, Memory Card & Battery Installation

Always turn off the phone and detach the charger when you insert or remove a SIM card or battery from the phone.

1. Lift the battery cover up to open as shown in figure.

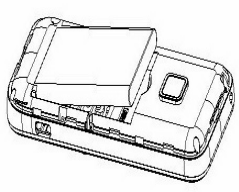

2. Locate the battery groove at the bottom middle of the battery compartment and lift the battery up with your fingers, remove the battery out from the phone.

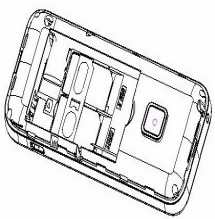

3. Locate the SIM card into socket, slide the SIM Card into its holder. Make sure that metal contacts of the SIM Card are facing down, and the cut off corner is correctly figure.

4. Locate the memory card slot at the bottom of battery compartment, slide the memory card into its slot with the metal connector facing down.

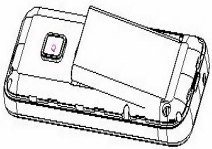

5. Place the battery in the back of the phone with the label side up and the connectors facing each other.

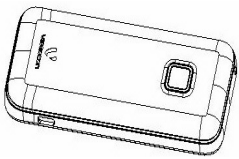

6. Place the battery cover as shown in the picture and push it into place.

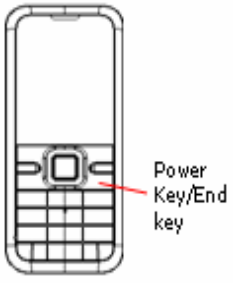

7. To Power your phone ON or OFF, press and hold the End key for at least 3 seconds or until the display lights goes up or goes off. Enter the lock code if necessary and select OK to Power ON.

Connecting Hands-free Kit (Ref Figure 2)

You are provided with a hands-free earpiece set with your phone. The same can be used to listen to your mp3 songs and listen and speak while on a call. To connect the hands-free earpiece, simply connect the connector into the connecting socket as shown in the figure. When properly connected, the phone will display a message 'Earphone Plugged In!' with an icon displayed on top of the screen.

NOTE: Only use VIDEOCON specified accessories.

Figure-2

Connecting the charger/Charging the Battery (Ref Figure 3)

1. Plug the charger's transformer into a standard AC outlet.
2. Insert the charger's output plug into the phone's connecting socket as shown in figure-4.

NOTE: The battery icon/charging icon would appear on the screen while charging.

Figure-3

3.3. Phone Keypad Layout (Figure 4)

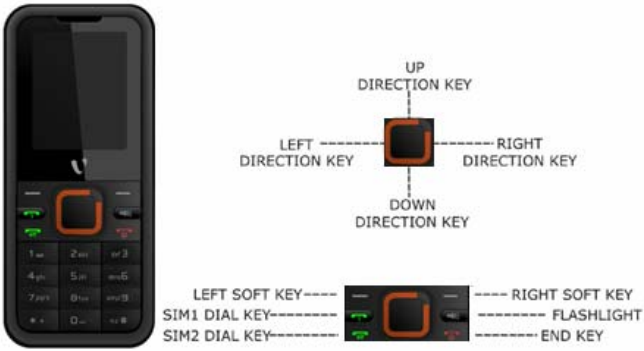

Figure-4

Left Soft Key

Performs functions in lower left display. In standby mode, press OK key to open main menu.

Right Soft Key

Performs functions in lower right display.

Dial Key

- Make calls
- Answer calls
- Press when idle to see the call history.

End Key

End or reject calls; Press and hold this key to turn phone on/off.

Up and Down Direction Keys

- Scroll to select options
- In standby mode press to open shortcut applications.
- In edit message status, press to select the required word.
- In function menu, scroll to open desired function.

Left and Right Direction Keys

- Scroll to select options
- In standby mode press to open shortcut applications
- In edit message status, press to select the required word.

0-9 Keys

In standby mode, press number keys to input dialing number. In standby mode, press and hold 1 key to

enter Voice mailbox, press and hold 2-9 key to directly call the number set before, in the speed dial list. In edit status, press to input numbers, characters and phonetic notation. In edit mode, except input number, press 0 key to input space. In functional menu, press numbers to speed select submenu items.

* & # Key

Functions vary in different situations or function menus: On Input Screen, press "*" for symbols. In standby and dial mode, press and hold "*" to input + for an international call. On Input Screen, press "#" to switch between different inputting methods. In standby mode, press and hold # key to switch between silent mode and previous mode. Press Left soft key/OK key and hold * key to lock/unlock the keypad.

3.4. Important Phone Icons

Signal Strength Icon

The Signal Strength Icon is seen on the top leftmost corner of the screen. The icon helps you to identify the strength of the network; the phone has latched on to, at that particular instance. It has a maximum of 4 bars with a minimum as no bar. 4 bars signify strongest network strength and subsequently minimizes with each diminishing bar. No bar signifies least or no network strength.

Battery Meter Icon

The Battery Meter Icon is seen on top rightmost corner of the screen. The icon signifies the battery strength available at that instance.

NOTE: At very low battery levels, the phone will prompt 'Low Battery' message on the screen.

Keypad Lock Icon

The Keypad Lock Icon is seen on top of the screen at various positions depending on the number of icons displayed. A closed lock signifies that the keypad is locked. You can unlock the keypad by pressing Left soft key/Ok key and holding * key on the phone. Similarly for locking the keypad, press Left soft key/Ok key and hold * key.

3.5. Basic Functions

Make a Call

To make a call, unlock the keypad, if locked, enter the desired phone number and press the Dial key.

NOTE: Your service provider programs one or more emergency phone numbers, such as 112, 100, that you can call under any circumstance, even when your phone is locked or the SIM card is not inserted. Check with your service provider, as emergency numbers vary by country. Your phone may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental or interference issues.

Making a Call Using Call logs

All dialed and incoming numbers are saved in call logs and categorized into Missed Calls, Received Calls and Dialed Calls. To check the logs, please follow these steps:

In standby mode, press the Dial key to view Call logs. Use the scroll keys to scroll among Missed Calls, Received Calls and Dialed Calls.

Answering a Call

- To receive an incoming call, press the Option key and select 'Answer' or receive it directly by pressing the Dial key.
- If headset is available, user can choose headset keys to answer the call.

Call Option

The VIDEOCON V1402 phone offers multiple functions during a call. During a call, the following functions can be actualized if you operate according to the instructions on the screen. Press up and down direction keys to choose the function you want and press select key to enter.

- Voice changer: Set different voice mode during the call.
- Hold single: To hold an active call.
- End single: End the present active call only.
- New call: To make a new call.
- Phonebook: To explore the Phonebook for phone numbers.
- Messages: To explore Messages menu.

- Sound recorder: To record a conversation between the active members of the conversation.
- Background sound: You can select whether to set background sound when making a call and select effect list.
- Mute: Turn on/off the Microphone during an active call.
- DTMF (Dual-tone Multi-frequency): You can choose on/off; which is to send dual-tone multi-frequency sound. This can offer dialing to the telephone numbers with extensions or IVR systems installed for menu driven options.

NOTE: This feature is network dependent.

4. Menu Layout

Phonebook

- Quick search
- Search contact
- Add new contact
- Copy or delete
- Caller groups
- Extra number
- Phonebook settings
- My vCard

Call history

- SIM1 call history
- SIM2 call history

User profiles

Multimedia

- Camera
- Image viewer
- Video recorder
- Video player
- Audio player
- Sound recorder
- FM Radio
- Schedule FM recording

Messages

- SMS
- MMS
- Schedule SMS
- Chat
- Voice mailbox
- Broadcast message

Game

- Copter
- Game settings

Organizer

- File manager
- Calendar
- Tasks
- Alarm
- Calculator
- E-book reader
- Stopwatch
- World clock
- Currency converter

Services

- STK
- WAP
- Data account

Settings

- Call settings
- Dual SIM settings
- Phone settings
- Network settings
- Security settings
- Restore factory settings

4.1. Phonebook

Quick search

Quick search allows you to quickly search an entry in the Phonebook by entering the key letters or words of the name. After finding the desired number the user gets the following options:

- **Dial:** Selecting the option will dial the number found by quick search.
- **Send SMS:** Selecting this option will enable the user to send an SMS on the number selected.
- **Send MMS:** Send Number allows the user to send the selected entry's details to another recipient as a multimedia message.
- **View:** View option gives you the details of the number selected.
- **Edit:** Edit option gives you the option to edit the details of the selected number. The details including Name, number, Home number etc.
- **Delete:** The option allows you to delete the selected entry.
- **Copy:** The option allows you to Copy the entry selected entry to the phone or to the SIM card depending on where the entry was stored before.
- **Move:** The option allows you to move the entry from Phone to SIM or from SIM to phone depending on where the entry was selected from. The moving entry will be automatically deleted from the last storage device.
- **Duplicate:** The duplicate option enables you to duplicate the same entry in the same storage device (Phone or SIM) depending on the last storage device.

- **Send vCard:** This option will enable you to send a business card of the selected entry via SMS, MMS or save as a file.
- **Send to blacklist:** This option is used to black list the selected entry. Once blacklisted, your phone will reject all calls from those numbers that before they reach the phone.

Search contacts

Unlike 'Quick search', 'Search contacts' option enables the user to search an entry by its complete name.

Add new contacts

Select this option in order to add a new entry into the SIM memory or to the phone memory.

Copy or delete

You can copy or delete the contacts whichever you select from the Phone memory to SIM memory and vice-versa.

Caller groups

Caller Groups contains five default groups:

- Friends
- Family
- VIP
- Business
- Others

Selecting any group allows you to edit the options available with it. For example:

- Setting the ring tone associated with the group.
- Photo associated with the group.

Extra number

It has the following options to edit:

- **SIM1/SIM2 owner number**
- **Emergency number**

The phone gives you an option to dial three numbers for contacting in case of any emergency.

Phonebook settings

The following fields are listed under settings:

- **Memory Status:** This option enables you to check the memory status of the phone and the SIM card.
- **Fields:** Giving you an option to select the fields to be edited at the time of adding a new entry in the Phonebook. The fields include:
  - Home number
  - Company name
  - E-mail address
  - Office number
  - Fax number
  - Birthday
  - Contact photo
  - Choose ring
  - Caller groups

My vCard

Edit vCard contacts saved in micro SD card.

4.2. Call history

You can check all Calls/SMS related information under Call history menu. Call history menu has details for:

- **All calls**
- **Missed calls**
- **Dialled calls**
- **Received calls**
- **Delete call log**
- **Call timer**
- **Call cost**
- **SMS counter**
- **GPRS counter**

You can also delete call lists by selecting “Delete call log” option.

4.3. User profiles

All the different profiles are listed under this menu:

- **General:** The profile gives you an option to activate and customize the settings. You can customize the following features:
    - **Tone setup** – Tone setup enables you to set up different music tones to different functionalities of the phone like Incoming call, Alarm, Message tone and Keypad tone.
    - **Volume** – You can vary the volume levels for Ring tone and Key tone.
    - **Alert type** – Alert type lets you choose the way you want to be alerted. You can choose from Ring,

Vibrate only, Vibra and ring, Vibrate then ring.

- **Ring type** – Ring type lets you select the type of ring to alert you. You can choose from Single, Repeat and Ascending.
- **Extra tone** – Extra tone is added to a number of incidences such as Warning tone, Error, Network connecting tone and Connect.
- **Answer mode** – Answer mode gives you the choice to select any key to answer a call. Any key enables you to receive a call using any key of the phone except the End key.
- **Backlight settings** – You can set brightness, time, keypad and lamp.

- **Meeting**
- **Outdoor**
- **Indoor**
- **Headset**
- **Power saving**

4.4. Multimedia

The VIDEOCON V1402 comes with a host of multimedia applications to provide you with unlimited entertainment.

Camera

By pressing the left soft key to select **Option**, you can go to following options:

- **Image viewer:** Open the Image viewer to view the photos. You can set the photo default storage path to phone or memory card.
- **Camera settings:** Carry out such related settings as the Shutter sound, EV, Banding, Delay timer and Cont shot.
- **Image settings:** Set size and quality of photos.
- **White balance:** You can select Auto, Daylight, Tungsten, Fluorescent and Incandescence.
- **Scene mode:** You can select from Auto and Night mode.
- **Storage:** You can set the photos default storage path to phone or memory card.
- **Restore default:** Restore to default settings.

Image viewer

Image viewer stores all your pictures which are preloaded as well as those taken by the phone camera. It gives you the following options.

- **View:** To view the selected file.
- **Use:** The images selected can be forwarded to 'set as wallpaper', to put it as screen saver, to associate it with any phonebook entry (provided the image size is not more than 20K).
- **Send:** The images selected can be sent via MMS.

- **Rename:** You can rename the image according to your own choice.
- **Delete:** To delete the selected file.
- **Delete all files**
- **Sort:** The images stored can be sorted by Name, Type, Time and Size.
- **Storage path:** You can set the photos default storage path to phone or memory card.

Video recorder

You can record videos on your V1402 phone. Press the OK Key to start and stop the recording. Press the left soft key, and you can carry out such operations as Camcorder setting, Storage and Restore default.

Video player

The VIDEOCON V1402 comes with an inbuilt video player that plays all your favorite videos stored in the phone or the micro SD card.

NOTE: It supports all AVI format video files, and does not support 3GP/MPEG4 with AAC sound or above, it may appear to be silent.

Audio player

The VIDEOCON V1402 comes with an inbuilt music player that plays all your favorite songs stored in the phone or micro SD card. It gives you a host of setting options to make your listening experience interesting.

The player gives you an option to select from a list of songs already stored in phone/the micro SD card, to be played, added to your ring tones.

The player has the following setting options:

- **Play list** – Player setting gives you an option to select your play list source (Phone memory or Card memory).
- **Auto generate list** – It also offers to generate the play list automatically.
- **Repeat** – You can also select to repeat the song or complete play list (Off/One/All).
- **Shuffle** – You can shuffle the order of your songs to play. If you put this mode to 'ON', then the songs will be played in a random fashion otherwise, a sequential pattern will be followed.
- **Background play** – Background play option allows you to enjoy your music even if the player is minimized to use other functions of the phone.
- **Lyric display** – You can set on/off.

Sound recorder

You can record sound/voice on your VIDEOCON V1402 phone. Just select sound recorder, go to option and press record. Select Stop to save it.

Select ‘pause’ to pause the recording and ‘continue’ to resume the recording.

FM Radio

The VIDEOCON V1402 comes with an in-built FM Radio Receiver/Recorder Player. Press Option to find:

- **Channel list:** Store all the channels that the FM Radio can receive. You get options to play or edit them.
- **Manual input:** You can store and register your channel frequency and play it by pressing OK.
- **Auto search:** On selecting this, the FM tries to scan all the available channels provided by the network. To start the search, make sure that the radio is power ON.
- **Settings:** Under settings, you have options for Background play (ON/OFF), Loud speaker (ON/OFF), Recording format (AMR/WAV), Audio quality (Low/High) and Storage device (Phone/Memory card).
- **Record:** You can record your favorite music or program.
- **Append**
- **File list:** Select File list to check your previously stored recording files.

The FM Radio also gives you an option to change the settings through shortcut keys available on the main window. Such as ‘To Power ON’, to ‘Skip to next channel’ and to ‘skip to previous channel’ using the direction keys on the keypad.

Schedule FM recording

VIDEOCON V1402 comes with a unique feature of FM Scheduling. This feature enables you to schedule the radio to power ON itself and record your favorite program. You can set the time, date, and channel and record functions to record the desired program. It can record 4 programs for you to enjoy them anytime later at your own wish. On pressing Edit, you will have the following functions to set:

- ON/OFF
- Date and Time
- Repeat
- Channel settings
- Recording settings

4.5. Messages

Your phone supports various messaging services. You can create, send, receive, edit and organize text messages.

SMS

Under SMS, the phone has the following folders listed.

- **Write message:** Input content by selecting preferred input method.
- **Inbox:** This folder stores all the received messages.
- **Outbox:** This folder contains all the messages sent from your phone.
- **Template:** Templates stores 10 preloaded/pre-written text messages for ready usage. You can edit the templates

according to your wish and also store the messages that you send frequently.

- **SMS settings:** SMS settings stores all the different settings responsible for sending and receiving messages.
    - **Mode setting**: It contains modes which include Folder name, Service Centre address, Validity period and Message type.
    - **Common settings:** These settings include the following - Delivery report, Reply path.
    - **Memory status:** Memory status gives you the information about the storage status of the phone memory as well as the SIM memory.
    - **Preferred storage:** Lets you select the default storage location of the messages between Phone and SIM.
- **SMS blacklist:** Set SMS blacklist on/off, and edit black list.

MMS

The phone has the capability to support Multi Media Services. You can send and receive multimedia files by using this feature, provided, you have this service activated on your SIM card. It has the following folders listed:

- **Write Message**
- **Inbox**
- **Outbox**

- **Draft**
- **Template**
- **Message settings**

Schedule SMS

You can pre-edit a message to be sent in the specified time to the selected person.

Chat

Chat enables you to enter 2 different user's default settings (Chat room 1 and Chat room 2) to enable sending and receiving the messages. Chat option enables you to see the complete conversation on a single window.

Voice mailbox

The Voice mailbox is an interactive system for storing, processing and reproducing verbal messages through a voicemail server. The service is operator dependant and the settings are provided by the operator upon activating the service on the SIM card.

Broadcast message

Your phone is capable to receive and store broadcast messages. You can set the receive status to ON/OFF. Read Message folder stores the received messages.

4.6. Game

Copter

Game settings

These settings enable you to vary from settings in background music and sound effect to ON/OFF,

allow you to put the vibration mode to ON/OFF and allows you to increase/decrease the volume levels.

4.7. Organizer

File manager

As the name suggests, File manager allows you to manage all the files stored in the phone and the memory card (up to 2GB).

1. You can view the remaining memory and available memory in phone/micro-SD card.
2. You can open and navigate the directories and files in the storage.
3. You can View, Play and Setup files in the storage disks.

The options available are:

- **Open**
  - Ebook
  - Images
  - Audio
  - My music
- **Create folder**
  You can create a new folder to store files.
- **Format**

NOTE: Formatting the phone or Memory card will erase all existing data from them.

Calendar

You can use the calendar to keep track of important meetings. After entering the calendar function menu you can select year, month and date using direction keys. On a selected date you can select to view:

- **View tasks:** If there is a special background color on a date it means there is some task on that day. You can also view any Note/Remark mentioned by you for a task stored by you previously.
- **Add task:** When you add a new task, you can do the following:
    - Input task duration time.
    - Add a Note for that task.
    - Set alarms on/off.
- **Go to date:** Input a date, and then press OK to go to a specific date for entry/edit/viewing of task for that date.
- **Week view**: Select this option to view tasks in weekly format.

Tasks

All tasks saved in calendar, can be viewed in Tasks.

Alarm

The Alarm can be set to ring at a specific time on several days. There are five different default alarms. You can set these alarms to wake you up at different time on specific day(s) of a week. The alarm can use radio as an alarm tone also.

Calculator

Keep your calculations on your finger tips with the calculator.

E-book reader

You can read the e-book stored in the phone or micro SD card.

Stopwatch

The phone comes with 2 types of Stopwatch.

- **Typical stopwatch**
- **nWay stopwatch**

Now, burn the track while you keep every move traced and counted.

World clock

World clock can be used to know the time in various cities across the world. You can see a world map and immediate time in those cities using world clock. Enter world clock to view a particular city's time using the direction keys.

Currency converter

Use this feature for the exchange rate conversion.

4.8. Services

STK

STK stands for SIM Tool Kit. This service is provided by the network provider and is used to initiate various Value Added Services, provided the SIM and the operator supports this feature.

WAP

WAP or Wireless Application Protocol browser provides all the basic services of a computer based web browser but is simplified to operate within the

restrictions of a mobile phone. The WAP Browser has the following options:

- **Homepage:** Homepage allows you to enter the default URL on the phone. This will enable you to go to the same page every time you access the homepage.
- **Bookmarks:** Bookmarks enables you to mark a place in an electronic document or a pointer (primarily to an internet URL) in an Internet web browser.
- **Recent pages:** Recent Pages stores the list of URLs which have been recently visited by you on the WAP browser.
- **Offline pages:** Offline Pages stores the list of URLs which you have saved.
- **Enter address:** Enter the desired address (URL) of the website or webpage in this column.
- **Service inbox:** Service Inbox receives and stores URLs through text messages from the operator. You can read them and accept to go to the web page and browse.
- **Settings:** You can vary the following settings:
  - **Select SIM**
  - **Edit profile**
  - **Browser options**
  - **Service message settings**
  - **Clear cache**
  - **Clear cookies**

Data account

Data account contains two types of accounts used to establish GSM/GPRS connections for WAP, MMS and www browsing.

- **GSM data**
- **GPRS**

NOTE: Select the appropriate setting from the list for using a particular feature depending on the availability of the operator services.

4.9. Settings

Under settings, the phone gives you the option to change the settings for various features of the phone.

The following list is available in Settings:

Call settings

- **SIM1/2 call settings**
    - **Call waiting -** you can activate this function or deactivate it, and can also view the current settings via query.
    - **Call forward -** You can set to forward the incoming calls in different conditions.
    - **Call barring -** In order to activate this service, it requires the services provided by the network service provider. When you change Barring password, you need to input the old password.

- **Closed user group -** several numbers can be listed to form a user group. Use this option to specify restrictions to the communication of a user group.

- **Blacklist:** Set whether to activate the incoming call filter, and edit the blacklist.
- **Voice changer:** Set different voice mode during the call.
- **Auto redial:** You can select to redial the number automatically when a call is not connected.
- **Speed dial:** Set speed dial on/off, and edit the speed dial list number.
- **Background sound:** You can select whether to set background sound when making a call and select effect list.
- **More…**
  - **Call time display -** After setting this function on, you can view the call time displayed on the screen.
  - **Call time reminder -** After setting this function to 'on', it will offer a warning tone towards the single or periodic setting as your own during the call process, so you will be reminded of the call time at periodic intervals during a call.

- **Auto quick end -** Can be set to open or close the function, duration of time 1-9999 seconds.

Dual SIM settings

You have following options listed under Dual SIM settings:

- **Dual SIM open:** This option activates both the SIM cards.
- **Only SIM1 open:** This option activates only SIM1.
- **Only SIM2 open:** This option activates only SIM2.
- **Flight mode:** This option disables all RF communication for both SIM1 and SIM2, however, enables you to use other features/functions of the phone.

Phone settings

You have following options listed under phone settings:

- **Time and date:** Let you set the Time and date on the phone.
- **Schedule power on/off:** Let you set a particular time on the phone when the phone should Power on/off itself.
- **Language:** The VIDEOCON V1402 currently supports English.
- **Preferred input methods:** This enables you to select the text input method: They

are – Smart ABC/abc, Multitap ABC/abc, Numeric input.

- **Display settings:** Under Display settings, you can set a host of different characteristics of the phone. Like
    - **Wallpaper** – Set your favorite wallpaper on the phone.
    - **Screen saver** – Lets you set an image as a screen saver.
    - **Show date and time** – Enables you to see the date and time on the idle screen.
- **Greeting text:** Let you set your own greeting message when you power ON the phone.
- **Shortcut:** Assign shortcuts as per your requirements to specific keys.
- **Dedicated key:** This option helps you dedicate/map certain key features of the phone with the Directional keys (UP/DOWN/LEFT/RIGHT) of the phone. At anytime you can change the mapping and select a new feature from the list of features available.
- **Auto update of date and time:** This feature automatically updates the date and time on the phone, receiving it from the network.

  NOTE: This feature is network dependant.

Network settings

Network setup gives the user the option to select a desired network and addition of a new network to the network list. The network setup gives you the following options:

- **Network selection** (Automatic/Manual)
- **Preferred networks** – Will list down all the network IDs (depending on the SIM card used).

Security settings

Under Security settings, we have the following options available:

- **SIM1/2 Security settings**
  - **SIM1/2 lock:** press OK key to enable PIN lock, which will require you to input a password when the mobile phone is switched on. Otherwise, the SIM card is unavailable.

During setup, it requires to enter the correct PIN code. If a wrong code is entered for three times, the PUK (Personal Unlock code) will be required, PUK is used to unlock and change the locked PIN code. If PUK code is not provided, please contact your local network service provider.

- **Fixed dial:** Outgoing calls from your phone can be restricted by making a fixed dialing list that allows only numbers on that list to be dialed from the phone.
- **Barred dial:** Barred Dialing is a SIM card/Network dependant feature If your

operator supports it, then you can use the facility in the phone.

- **Change password:** Change Password option gives you the options to change PIN1, PIN2 password.
- **Mobile tracker:** if you lose your phone, this function may probably help you to get back your phone.

1. First you should insert SIM card.

2. Enter Settings → Security Settings → SIM1 security settings → Mobile tracker.

3. Enter the password (The password is 0000, same as Phone lock password).

4. Status is ON.

5. Enter “Recepient number”. You can add two numbers. For example, add number 8613764205302 and 8613564952956 (“86” is the country code).

6. Finish.

7. Power off. Pull off the SIM card, and insert other SIM card. (If you set SIM1 Security, you will pull off the SIM1 and insert another SIM1).

8. Power on. The handset will send a message to the numbers (You enter the numbers in “Recepient number”). You will know which number is using your handset. If you insert former SIM card, the handset will not send the message.

- **Phone lock:** Phone lock protects your phone from any unauthorized usage or unauthorized access to information stored in the phone. When phone lock is activated, the phone would ask for the phone lock code every time you power-on the phone. Enter the lock code (default as 0000) to use the phone. You can simply unlock the phone by going into Security settings > Phone lock > enter the lock code and put it off.
- **Keypad lock:** Auto Keypad lock automatically locks the keypad after a preset time interval. You can set the time from 5 seconds to 1 minute.
- **Data security:** By inputting the password (default as 0000), you can protect your Phone book, Call history, SMS, MMS and File manager data.
- **Change password:** Change password option gives you the option to change phone lock password and data security password.

Restore factory settings

- Selecting this option will ask you to enter the password to restore the phone to factory settings. The default password is set as 0000.